



INSTALLATION INSTRUCTIONS

CLUB CAR PRECEDENT RADIO CONSOLE



- **C-5-52** - ABS Black Finish
- **C-5-52CF** - Carbon Fiber
- **C-5-52RB** - Regal Burl
- **C-5-52TT** - Turn Titanium

Part List:

- Console/Top Mount Bracket
- "L" Bracket For Rear Radio Support
- 16 - #8 X 1/2" Phillips Round Washer Head Screw
- 4 - 3/16" Large Flange Rivet
- 4 - 3/16" x 3/4" Fender Washer

(Radio & Speakers Not Included)

Part Number:

- (C-5-52)
- (MS-0-116)
- (HW-08)
- (HW316-13)
- (HW316-14)

Tools Needed:

- Rivet Tool
- Cordless Drill
- 1/16" & 3/16" Drill Bit
- 1/16" Phillips Bit
- Phillips Screw Driver


INSTALLATION

Speaker holes are cut for 6" round speakers.
Speakers not included.

IMPORTANT! You must have a 12 volt power supply before connecting your radio.

STEP 1:
Remove top support bolts.

STEP 2:
Nestle mounting bracket up against top fins.

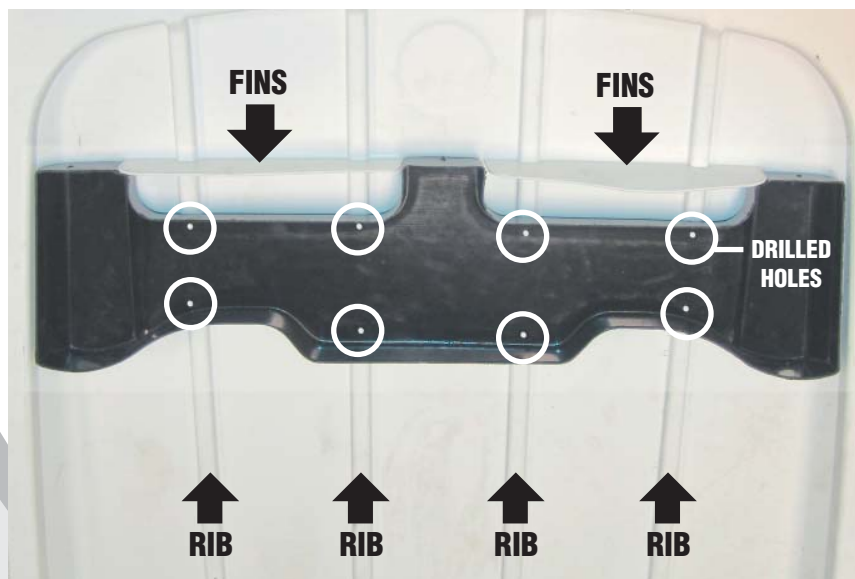

STEP 3:
Once mounting bracket is in place. Drill 8 holes through mounting bracket into top ribs with 1/16" drill bit. **BE CAREFUL TO DRILL THROUGH BOTTOM SKIN ONLY.** Use a drill guide and set depth to 1/4" Max.

We are not responsible for holes drilled through top of top.

INSTALLATION




STEP 4:

Use 8 screws provided to attach top mounting bracket. Once the mounting bracket is secure. Drill 4 holes through mounting bracket and top. Use 3/16" drill bit. This time you want to **DRILL COMPLETELY THROUGH TOP IN LOCATIONS SHOWN ABOVE IN PHOTO.**

STEP 5:

Once the 4 holes have been drilled, take the 4 large rivets and 4 fender washers and reinforce mounting bracket to the top by using rivet hand tool.

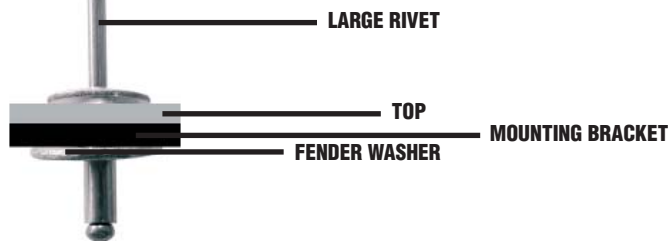

INSTALLATION

STEP 6:

Take the over head console and place it over the mounting bracket. Once the over head console is in place drill 7 holes through mounting bracket and console with 1/16" drill bit. 4 holes in front of console and 3 holes behind.



FRONT




BACK

After drilling holes, remove the overhead console and begin installation of radio and speakers.

INSTALLATION


STEP 7:

Install radio unit per manufacturers instructions. Make sure to ground radio. Use small "L" bracket (shown below with arrow) to support rear of radio.

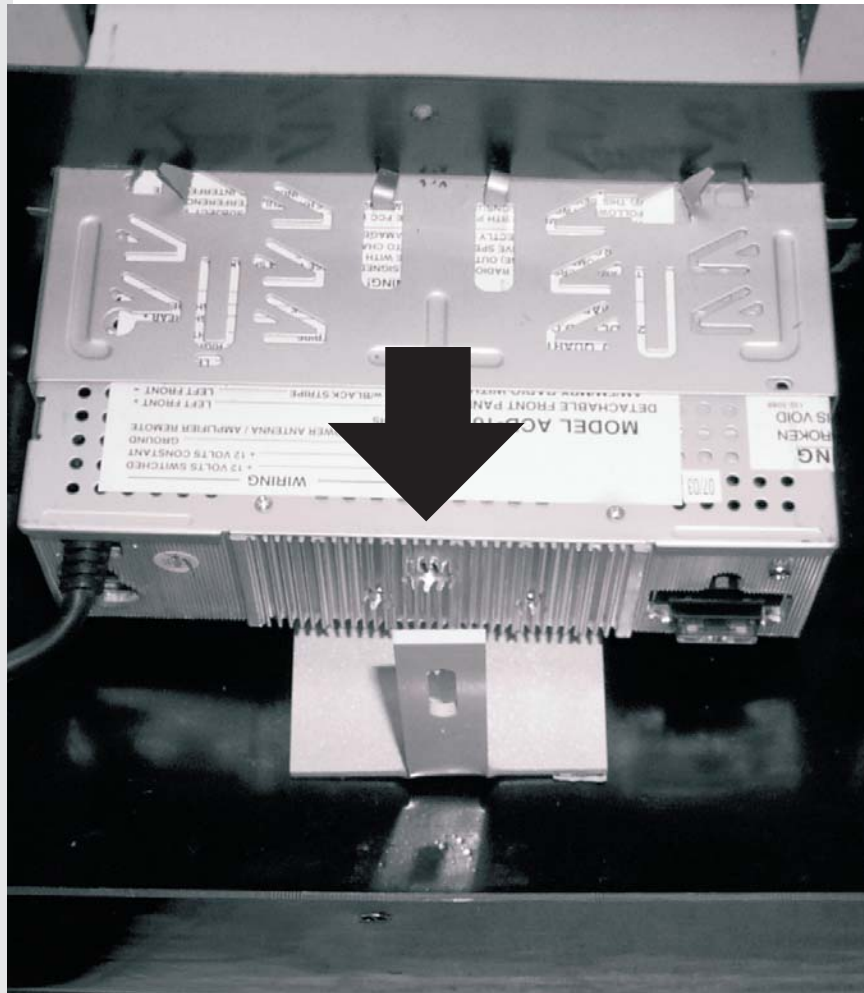

INSTALLATION

Attach using the bolt or screw on rear of radio. Adjust to correct height and then tighten screw. When location is set lift up the rear of radio to remove cover on tape on bottom of bracket and press in place.

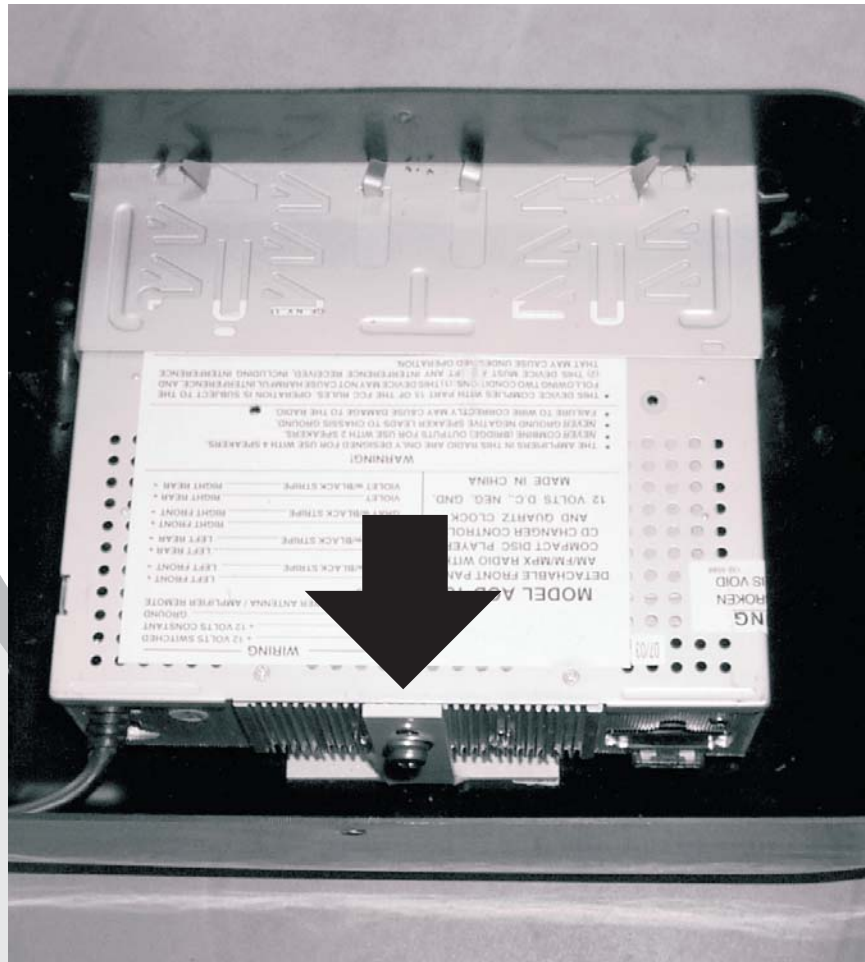

INSTALLATION

STEP 8:

All wiring should be done at this time. Suggestion: The front supports can be used to run wiring down to body by drilling holes big enough for your wire to run through a grommet.



STEP 9:

Lift console up over mounting bracket and attach using screws provided.

STEP 10:

Reinstall top support bolts and nuts that were removed in step 1.

STRECH PLASTICS ARE MANUFACTURERS AND DISTRIBUTORS OF THE HIGHEST QUALITY GOLF CAR PRODUCTS

ALSO AVAILABLE FOR PRECEDENT:

- Steering Wheel Covers
- Beverage Trays
- Windshields

Coming Soon:

- Dash Covers
- Light Kits



Golf Car Accessories Leader

©2006 Rev.03/29/06

VISIT US ON THE WEB TO CHECK OUT MORE GREAT PRODUCTS — www.strechplastics.com